

Pattern Information

Date
Pattern Type
Pattern Difficulty
Pattern Designer
Pattern Volume (ml)

Surface Information

Surface Type
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name
Mode
Forward Speed
Start Cleaner Spray
Start Squeegee
Start Oiling
Split Pattern

Supplies Information


Lane Cleaner
Cleaner Mixture Ratio
Cleaner Transition Distance
Cleaner Spray End Distance Envoy
Lane Conditioner

Notes **2015**

Nottke's

Zone	1	2	3	4	5	6	7	8
Zone End Distance	9	18	30	36	42			
Zone Ratio	L 3.1 : 1	3.9 : 1	5.0 : 1	5.1 : 1	1.0 : 1	### : 1	### : 1	### : 1
	R 3.1 : 1	3.9 : 1	5.0 : 1	5.1 : 1	1.0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	8.43	6.08	6.02	2.35	0.00	0.00	0.00	0.00

ZONE	7 Pin Side															Board Number															10 Pin Side														
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1						
1	28	28	28	28	28	28	30	30	30	44	55	85	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	85	55	44	30	30	30	28	28	28	28	28	28	28					
2	17	17	17	17	17	17	19	19	19	33	44	60	68	68	68	68	68	68	68	68	68	68	68	68	68	68	68	60	44	33	19	19	19	17	17	17	17	17	17	17					
3	10	10	10	10	10	10	12	12	12	26	34	45	53	53	53	53	53	53	53	53	53	53	53	53	53	53	53	45	34	26	12	12	12	10	10	10	10	10	10	10					
4	8	8	8	8	8	8	9	9	9	20	24	34	42	42	42	42	42	42	42	42	42	42	42	42	42	42	42	34	24	20	9	9	9	8	8	8	8	8	8	8					
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1					
6																																													
7																																													
8																																													

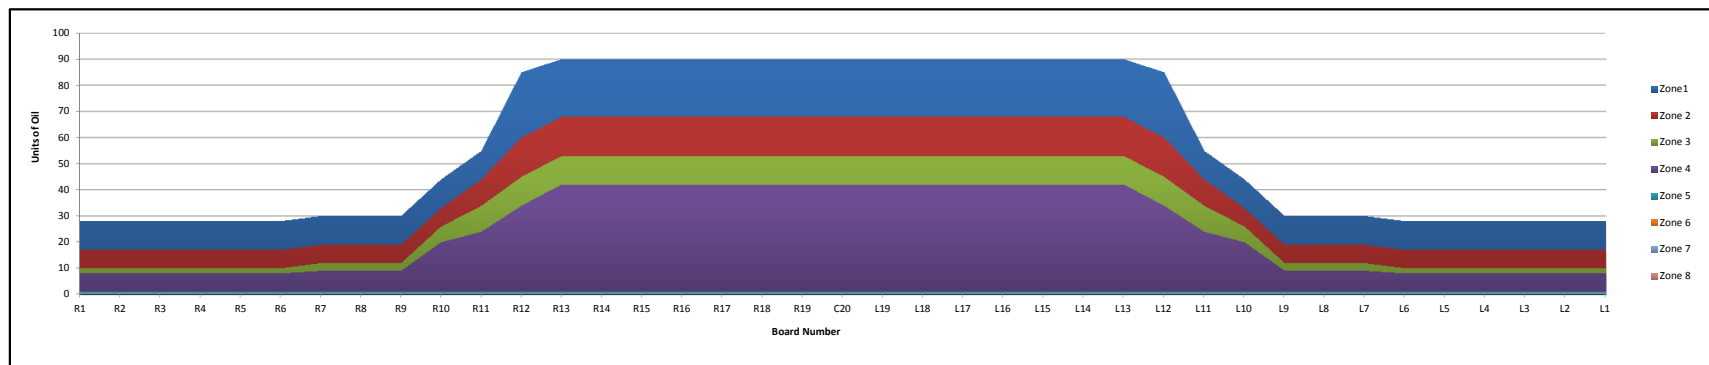



ENVOY AUTHORITY22®

MIUSBC STATE


Crosswise Ratios (by units)

Zone 1				Zone 5			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	28.4	3.1	3L-7L	Left =	1.0	1.0
3R-7R	Right=	28.4	3.1	3R-7R	Right=	1.0	1.0
18L-18R	Center=	90.0		18L-18R	Center=	1.0	
Zone 2				Zone 6			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	17.4	3.9	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	17.4	3.9	3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	68.0		18L-18R	Center=	#DIV/0!	
Zone 3				Zone 7			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	10.4	5.0	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	10.4	5.0	3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	53.0		18L-18R	Center=	#DIV/0!	
Zone 4				Zone 8			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	8.2	5.1	3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	8.2	5.1	3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	42.0		18L-18R	Center=	#DIV/0!	

Crosswise Ratios (by ml)

Zone 1				Zone 5			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	0.107	3.1	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right=	0.107	3.1	3R-7R	Right=	0.000	#DIV/0!
18L-18R	Center=	0.340		18L-18R	Center=	0.000	
Zone 2				Zone 6			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	0.066	3.9	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right=	0.066	3.9	3R-7R	Right=	0.000	#DIV/0!
18L-18R	Center=	0.257		18L-18R	Center=	0.000	
Zone 3				Zone 7			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	0.052	5.0	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right=	0.052	5.0	3R-7R	Right=	0.000	#DIV/0!
18L-18R	Center=	0.267		18L-18R	Center=	0.000	
Zone 4				Zone 8			
	Average	Ratio			Average	Ratio	
3L-7L	Left =	0.021	5.1	3L-7L	Left =	0.000	#DIV/0!
3R-7R	Right=	0.021	5.1	3R-7R	Right=	0.000	#DIV/0!
18L-18R	Center=	0.106		18L-18R	Center=	0.000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

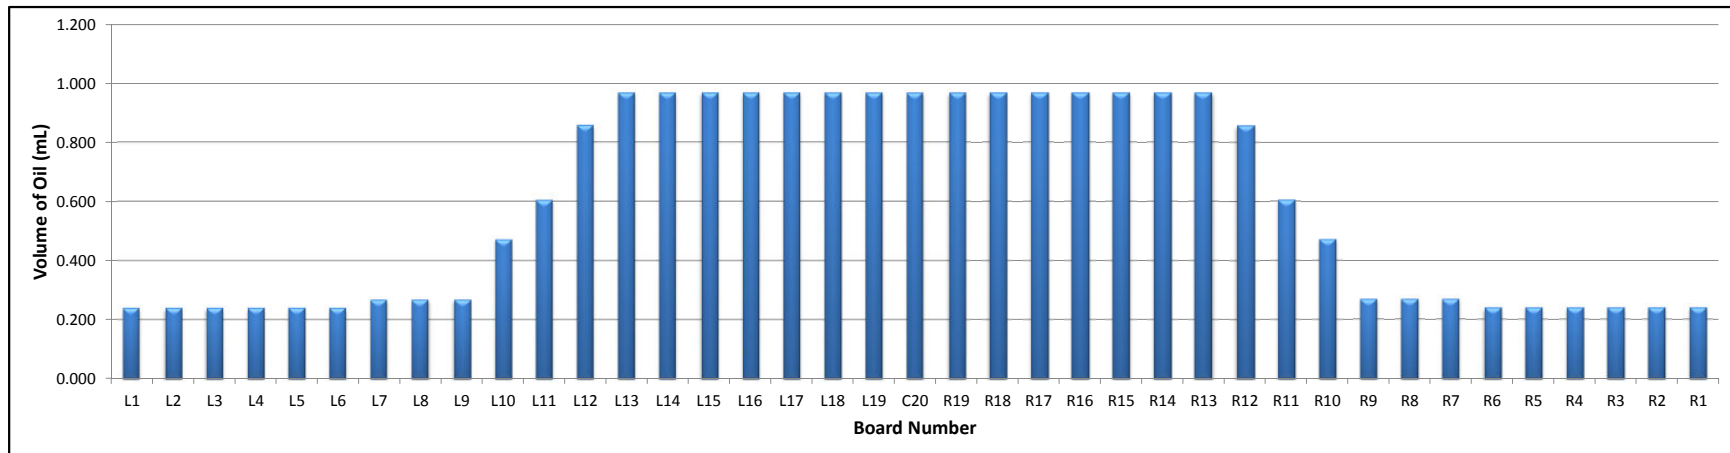



MIUSBC STATE

[illegible]

The diagram illustrates a sequence of colored blocks with numerical labels. The blocks are arranged horizontally and are colored yellow, orange, green, red, and tan. A dashed line runs horizontally through the middle of the blocks. The numerical labels are 9, 18, 30, 36, and 42, which are placed below the blocks. A blue arrow points to the right from the end of the sequence.